

# Instructions

for the

## LCD Panel



in the

**Biomedical Research Center  
Seminar Room (109)**

**This is a touch screen system.**

- 1) If the panel is blank (black) touch the panel screen anywhere and a photo of the Biomedical Research Center and the following will be displayed:

**STANTON L. YOUNG  
BIOMEDICAL RESEARCH CENTER  
(Touch screen to continue)**

- 2) Touch the panel screen again and all the room lights will come on. The following will be displayed:

**NOTE:**


Allow the system to **COMPLETELY** finish a command before proceeding with further commands (i.e., allow drop-down screen to completely come down). Otherwise the system may jam. If this happens, completely shut down the whole system (waiting for the screen to **completely** go back to the ceiling storage compartment) and start with step 2 listed above.

<b>MAIN MENU</b>			
<b>HOUSE LIGHTS</b>	<b>STAGE LIGHTS</b>	<b>COMPUTER GRAPHICS</b>	<b>MIC AUDIO</b>
ON	ON	SLIDE SHOW	ON
UP	UP	VIDEO	UP
DOWN	DOWN	OVERHEAD PROJECTOR	DOWN
OFF	OFF	SCREEN UP	MUTE
<b>LCD CONTRAST</b>		<b>SYSTEM OFF</b>	

- 3) Touch the button that corresponds with the function you will be using.

- A) **COMPUTER GRAPHIC:** If using a **computer** (i.e.: PowerPoint presentations).
- B) **SLIDE SHOW:** If using the **slide projectors** in the audio-visual room.
- C) **VIDEO:** If using the **VCR** in the audio-visual room.
- D) **OVERHEAD PROJECTOR:** If using the **overhead projector**.
- E) **SCREEN UP:** Will return the drop-down screen to the ceiling.
- F) **SYSTEM OFF:** Will return the drop-down screen to the ceiling and slowly dim the lights until they are out. All that will remain on are the lights on either side of the room. (The side lights must be turned off at the back of the room.)

3A) After pressing the **COMPUTER GRAPHICS** button, the following will be displayed:

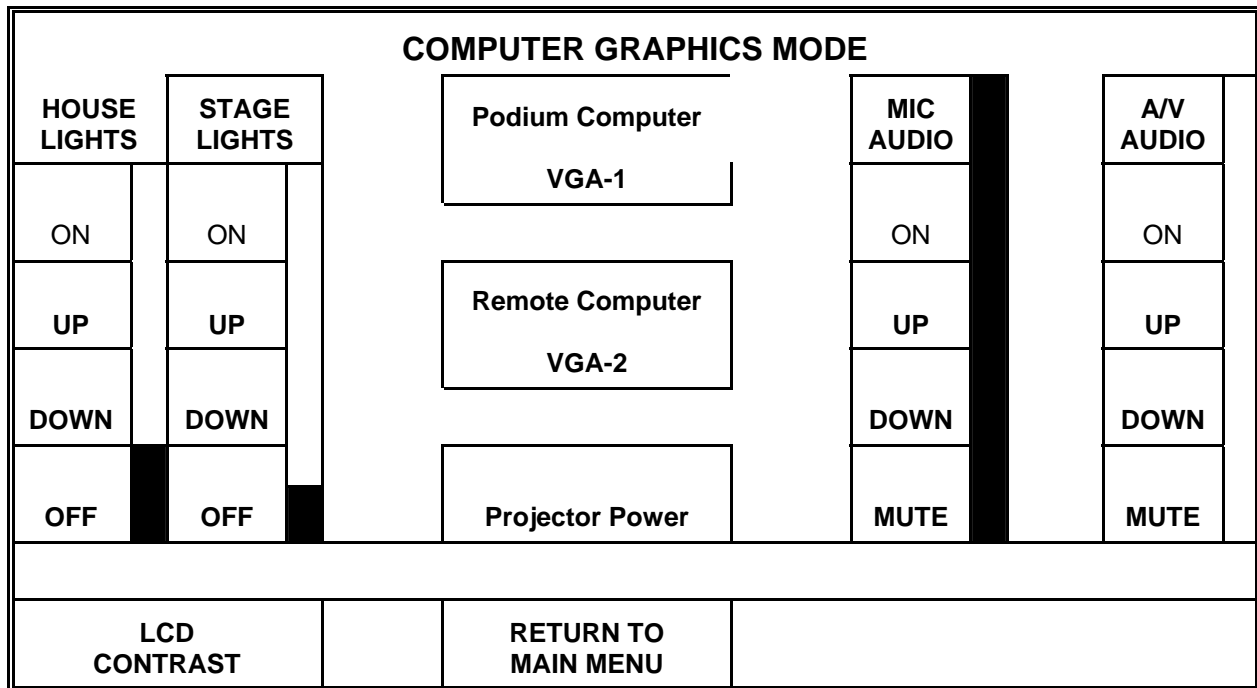

The screen will drop down from the ceiling and the lights will dim to a preset level. You can use the controls on the left side of the panel to raise or lower the level of the lights. Press the **PROJECTOR POWER** button to turn the projector on. A green light on the bottom of the projector will flash indicating power is on.

Connect computer cable into the laptop and into the podium and then boot-up the laptop. You are now ready to use the system for your computer presentation.

If using the cordless microphone, you can control the volume with the bar on the right side of the panel labeled **MIC AUDIO**.

When you are finished with your presentation, you must press the **PROJECTOR POWER** button twice to turn off the projector.

**RETURN TO MAIN MENU** will reset the lights to their full function. Choose another option or press **SYSTEM OFF**. Remember, the lights dim as the system goes off. Make sure the side lights are on or you will be in darkness.

**3B)** After pressing the **SLIDE SHOW** button, the following will be displayed.

SLIDE SHOW MODE									
HOUSE LIGHTS		STAGE LIGHTS		LEFT ON/OFF		RIGHT ON/OFF		MIC AUDIO	
ON		ON		FWD		FWD		ON	
UP		UP		REV		REV		UP	
DOWN		DOWN		FOCUS +		FOCUS +		DOWN	
OFF		OFF		FOCUS -		FOCUS -		MUTE	
LCD CONTRAST			RETURN TO MAIN MENU						

The screen will drop down from the ceiling and the lights will dim to a preset level. You can use the controls on the left side of the panel to raise or lower the level of the lights.

When facing the audiovisual room, the projector on the left is controlled by the **LEFT** column of buttons and the projector on the right is controlled by the **RIGHT** column of buttons.

If using the cordless microphone, you can control the volume with the bar on the right side of the panel labeled **MIC AUDIO**.

**RETURN TO MAIN MENU** will reset the lights to their full function. Choose another option or press **SYSTEM OFF**. Remember, the lights dim as the system goes off. Make sure the side lights are on or you will be in darkness.

3C) After pressing the **VIDEO** button, the following will be displayed.

VIDEO MODE											
HOUSE LIGHTS		STAGE LIGHTS		PLAY		VHS SOURCE		MIC AUDIO		A/V AUDIO	
ON		ON		FF		AUX 1 SOURCE		ON		ON	
UP		UP		REW		S-VIDEO SOURCE		UP		UP	
DOWN		DOWN		PAUSE		PROJECTOR POWER		DOWN		DOWN	
OFF		OFF		STOP				MUTE		MUTE	
LCD CONTRAST				RETURN TO MAIN MENU							

The screen will drop down from the ceiling and the lights will dim to a preset level. You can use the controls on the left side of the panel to raise or lower the level of the lights. Press the **PROJECTOR POWER** button to turn the projector on. A green light on the bottom of the projector will flash indicating power is on.

Choose the source you will be using (**VHS, AUX 1, S-VIDEO**) from the middle portion of the panel.

You are now ready to use the system. The controls for the VCR are listed in the middle portion of the panel.

If using the cordless microphone, you can control the volume with the bar on the right side of the panel labeled **MIC AUDIO**.

When you are finished with your presentation, you must press the **PROJECTOR POWER** button twice to turn off the projector.

**RETURN TO MAIN MENU** will reset the lights to their full function. Choose another option or press **SYSTEM OFF**. Remember, the lights dim as the system goes off. Make sure the side lights are on or you will be in darkness.

3D) After pressing the **OVERHEAD PROJECTOR** button, the following will be displayed.

OVERHEAD PROJECTOR MODE			
<b>HOUSE LIGHTS</b>		<b>STAGE LIGHTS</b>	
ON		ON	<b>MIC AUDIO</b>
UP		UP	ON
DOWN		DOWN	UP
OFF		OFF	DOWN
			MUTE
LCD CONTRAST		RETURN TO MAIN MENU	

The screen will drop down from the ceiling and the lights will dim to a preset level. You can use the controls on the left side of the panel to raise or lower the level of the lights.

If using the cordless microphone, you can control the volume with the bar on the right side of the panel labeled **MIC AUDIO**.

**RETURN TO MAIN MENU** will reset the lights to their full function. Choose another option or press **SYSTEM OFF**. Remember, the lights dim as the system goes off. Make sure the side lights are on or you will be in darkness.